



HTC Desire V Button Assembly Replacement

This guide will show you how to replace the Navigation Board of the HTC Desire V smartphone.

Written By: William McCusker



INTRODUCTION

This guide will show you how to replace the Navigation Board of the HTC Desire V smartphone.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery




- Gently pry back cover away from phone
- If you are having difficulty you may need to use a Spudger or plastic opener

Step 2



- Lever the battery out from the bottom end first.
- If you have trouble you can use the opening tools or the spudger again

Step 3 — Midframe

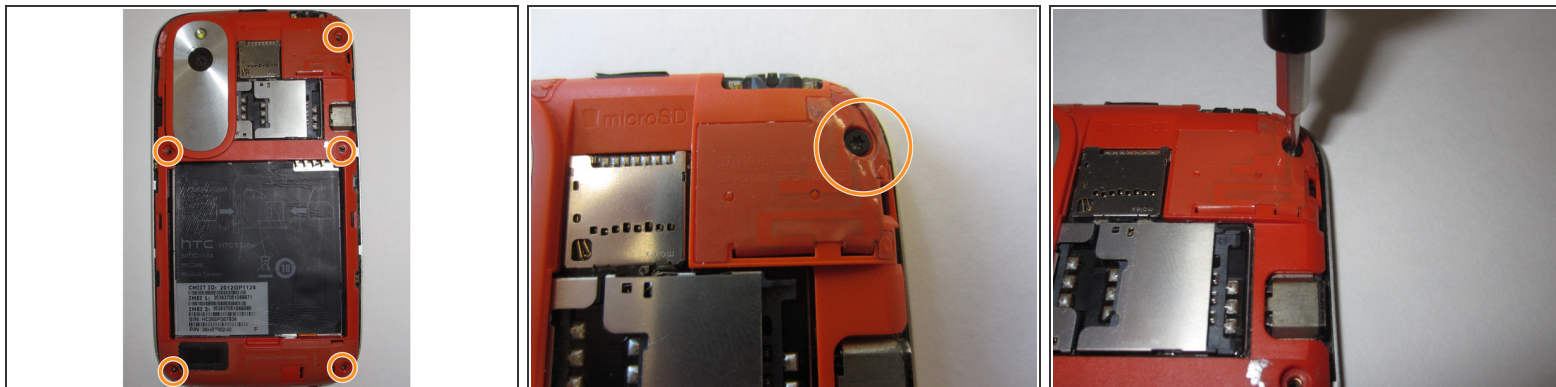

- Unscrew and remove five 3.0 mm black torx screws at the positions circled in orange.
- Use a Torx T5 screwdriver

Step 4




- Using an opening tool or a spudger, gently remove the plastic backing

Step 5 — Button Assembly




- Remove the connector on left side of the Navigation board by unplugging/prying the orange ribbon
- Use a spudger or the opening tools if you have trouble disconnecting

Step 6

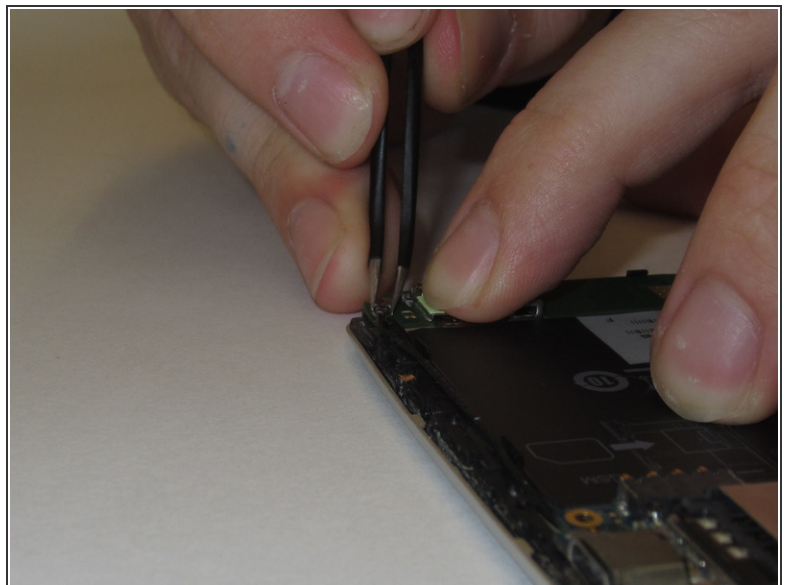

- Gently unplug and remove aerial cable (black antenna) from bottom plug
- If you lack usable nails, you will need tweezers

Step 7

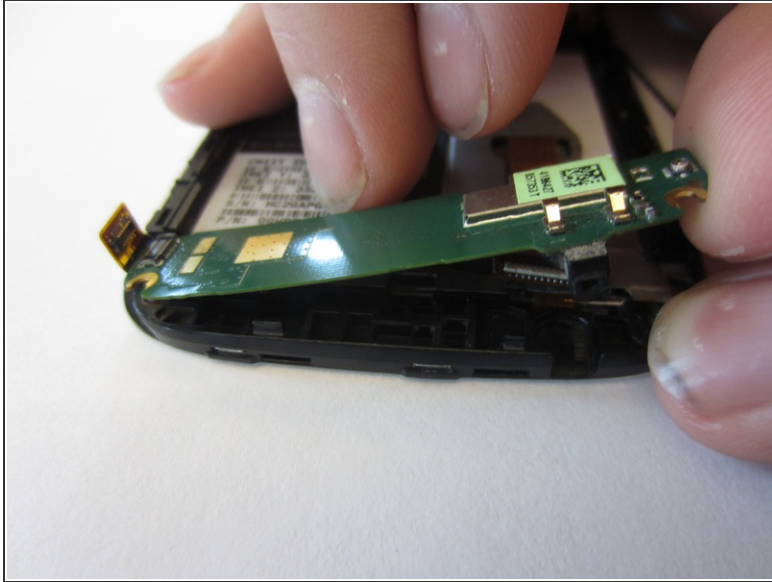

- Nav Board will be stuck down by glue
- Pull gently from the right end of the board, being careful of it's flexibility

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 08:47:38 PM.